

# TORK<sup>®</sup> IN-WALL SHUT OFF TIMER


MODEL#: **M560M, M512H SERIES**



DESCRIPTION:	IN-WALL MOTOR OPERATED INTERVAL (SHUT OFF) TIMER M560MW, M512HW = WHITE • M560MA, M512HA = ALMOND
CONTACT RATINGS:	120VAC, 15A RESISTIVE & GENERAL PURPOSE 1250W TUNGSTEN, 1/2 HP

**! CAUTION !**  
**RISK OF ELECTRIC SHOCK**  
Disconnect power at main panel prior to installing or servicing this lighting control or the equipment connected to it.

This timer is designed to fit a standard (min. 2 1/2" deep) electrical junction box in new construction or to replace an existing wall switch. It is used for the automatic control of whole house ventilating fans, air conditioners and heat lamps. It is recommended that installation be done by an electrician.

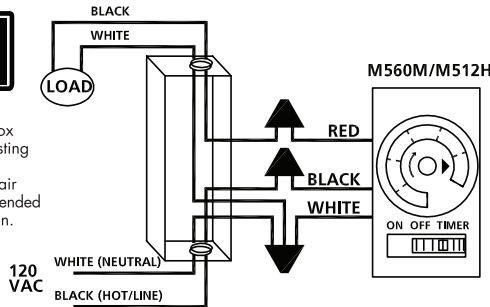

## INSTALLATION & WIRING INSTRUCTIONS

1. Switch off circuit breaker to disconnect power to the circuit.
2. In existing installations, remove wall plate and switch. There are three wires in the box as follows:  
"HOT" wire = usually black      "LOAD" wire = usually red      "NEUTRAL" wire = usually white
3. Carefully separate the face plate from the unit with a screwdriver
4. Connect the HOT wire to the timer's black wire, the LOAD wire to the timer's red wire and the NEUTRAL wire to the timer's white wire. Wires should be twisted together and secured with wire nuts (provided).
5. Replace all wires inside of the junction box by folding wires around the sides, bottom and top of timer. Do not force.
6. Using the two provided screws, secure the timer assembly into the holes in the junction box.
7. Carefully push the plastic snap-on face plate onto the timer assembly.
8. Restore power to the circuit.

## OPERATING THE TIMER

1. The slide has three positions:  
**ON:** Load is permanently ON    **OFF:** Load is permanently OFF    **TIMER:** Load is controlled by the timer
2. Manually rotate the knob clockwise to the duration desired. The load is turned ON instantly and will turn OFF at the end of the selected duration.

ONE YEAR LIMITED WARRANTY: If this product fails because of a manufacturing defect within one year after purchase, we will, at our option, either repair or replace it at no charge. Our warranty does not cover damage caused by accident, abuse or misuse. We assume no further liability with respect to the sale or use of this product. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY. We make no warranty with respect to the fitness of any goods for the users particular application. This warranty gives you specific legal rights, and you also may have other rights which vary from state to state.

It is our intent to provide accurate and current specification information. However, in the interest of product improvement, TORK may alter the specifications or constructional details without prior notice.

TORK, INC. • 888.500.4598 • [www.TORK.com](http://www.TORK.com)

A DIVISION OF **NSP** INDUSTRIES, LLC