


TORK® ASTRONOMIC LATITUDE ZONES

 
 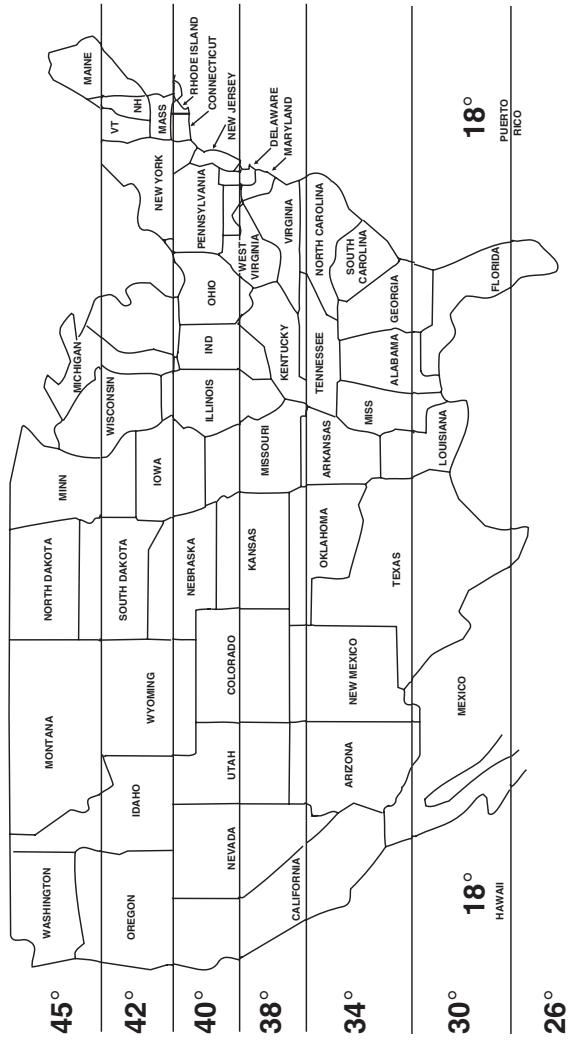


TORK®

18

A DIVISION OF **NSI** NSI INDUSTRIES, LLC
800.321.5847 • www.nsiindustries.com

MLI-184(A)



TORK® INSTRUCTION MANUAL

 
CLOCK OPERATED SWITCH



MEETS CALIFORNIA
ENERGY COMMISSION'S
TITLE 24 REQUIREMENTS

DIGITAL TIME SWITCH

DZM200BP



**FOR TECHNICAL SUPPORT:
888.500.4598**

TORK, INC. • 1 Grove St. • Mount Vernon, NY 10550
888.500.4598 • www.tork.com

INSTALLATION INSTRUCTIONS

1. Remove unit from enclosure by pushing the inside tab (located near the outside hasp) to the right. Swing unit to left and remove.
2. Five combination 1/2" and 3/4" knockouts are provided on this enclosure. Remove the 1/2" (inner) knockout by inserting a screwdriver in the slot provided and pound screwdriver handle with a hammer. Remove knock-out with pliers and smooth hole edges with file and knife if necessary. When the 3/4" outer knockout is required, place screwdriver in groove and pound screwdriver handle with hammer. Remove loose knock-out with pliers and smooth hole edges with file or knife if necessary.

Disconnect power at main panel prior to installing or servicing this time switch or the equipment connected to it. Connect in accordance with national and local electrical codes. Installation by a licensed electrical contractor is recommended.

3. When attaching conduit to enclosure, exercise care to align and support conduit in order to prevent unnecessary stress on enclosure.
4. Reinstall unit by reversing step 1 above and connect wires according to wiring diagram on inside case label.

GROUNDING

National Electrical Code requires that grounding must be continuous and in proper electrical contact in all grounding conductors, metallic conduits and grounding terminals. When using metal conduits, install the proper size approved grounding bushings. The minimum size copper grounding conductors must be #10 AWG if the circuit breaker or fuse is 30 or 40 amp, #12AWG if 20 amps, and #14 AWG if 15 amp.

NOTE: Do not use top entry for wiring

WE SUGGEST YOU MAKE COPIES OF THE SCHEDULE SHEETS LOCATED IN BACK OF THIS BOOKLET AND COMPLETE THEM PRIOR TO SETTING THE UNIT.

Holiday (H)		
#	Date	Description
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		
21		
22		
23		
24		

- Remove unit from enclosure
- Locate the copy switch and set it to OFF (red switch labeled BP01)
- Put unit back in enclosure
- Put back insulator that covers the terminal block. Make sure no terminals are exposed to the operator.
- Apply AC power to unit
- Insert the pin in the small pinhole (located in the upper right hand corner) to rest the unit.
- Set the time and date.

CAUTION: DO NOT REMOVE MEMORY MODULE WHILE UNIT IS ACTIVE. THE UNIT MUST BE RESET; TIME AND DATE MUST BE RE-ENTERED TO MAKE SCHEDULE SETTINGS EFFECTIVE ON THE MEMORY MODULE.

NOTE: AFTER MAKING ANY CHANGES TO THE PROGRAM, PRESS **MODE** TO GO TO RUN MODE AND THEN PRESS **EVENT** TO UPDATE THE LOAD STATUS.

INSTRUCTIONS FOR SETTING THE UNIT

Connect unit to main power source prior to entering the settings. When powering up the unit for the first time, allow 1-2 minutes to charge the supercap and the display will show 12 HOUR.



12:40 UP

Press **HOUR** to change to 24 hour (military format) or Press **ENTER** to set 12 hour (AM/PM format).

NOTES:

1. During the RUN mode, the Hour, Minutes, Seconds, Day of week and flashing colons will be displayed.
2. Unit will not go into run mode unless the clock and date information has been entered. In any other mode, if no entry is made for 5 minutes, the unit will automatically revert to the run mode.
3. Unit will display "PF" (Power Failure) in the absence of AC power. A minimum of 8 hours is required to fully charge the super cap.
4. When previously programmed unit comes back from a power failure, it will "look back" and update the schedule, executing the last scheduled event. If a signal setting was scheduled, after power failure the unit will execute the last scheduled signal. Settings can be manually updated by pressing the **EVENT** key in the run mode.

After pressing **ENTER** the unit will display:



SET
CLK

NOTE: AFTER MAKING ANY CHANGES TO THE PROGRAM, PRESS **MODE** TO GO TO RUN MODE AND THEN PRESS **EVENT** TO UPDATE THE LOAD STATUS.

1.0 TO SET THE CLOCK

Press **HOUR** and **MIN** to advance to the present hour and mins. Check AM/PM, and press **ENTER**.

1.1 TO MODIFY CLOCK

Press **MODE** until the display shows: **CLK**. Press **HOUR** and **MIN**. to modify clock and press **ENTER**.

2.0 TO SET DATE

If you are setting for the first time, display will show:



Press **MONTH**, **DATE** and **YEAR** key to advance to the desired month, date and year, then press **ENTER**. **NOTE:** The day of the week will be automatically set once the date is set.

2.1 TO MODIFY DATE

Press **MODE** until the display shows **DATE**. Press **MONTH**, **DATE** and **YEAR** to modify present settings and then press **ENTER**.

3.0 DAYLIGHT SAVING TIME


After setting or modifying the date, display will show:



NOTE: If daylight saving time (DST) is NOT required, press **MODE**, display will show:



This will read the schedule settings from the inserted Memory Module. Press **ENTER**. Display will show:

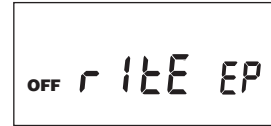


This will prepare the schedule settings to be copied to next Memory Module. Remove inserted Memory Module and insert Memory Module to be copied. Press **EVENT**, display will show:



Press **ENTER**. Schedule settings will be copied to the current Memory Module, display will show:



Press **ENTER**. The display will show:

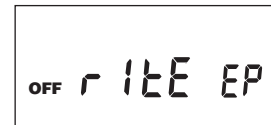

To copy another Memory Module, take the existing one out, insert the next module to be copied and press the **EVENT** key. This will turn ON the write function. Press Enter and the second module should be copied. Repeat this procedure to copy more modules.

After completing all copies:

- Insert original Memory Module
- Turn OFF AC power to the unit.

Now Press **ENTER** briefly and everything in the timer memory is wiped off including real time, date and 12HOUR will flash.

10.0 COPY PROGRAM SETTINGS TO ANOTHER MEMORY MODULE

WARNING: DO NOT USE UNIT AS COPIER WHILE PROGRAMS SETTINGS ARE ACTIVE. DOING SO WILL TURN OFF ANY CONNECTED LOADS.

Follow steps below:

- Take unit out of enclosure
- Locate the copy switch (red switch labeled BP01)
- Put the switch on the ON position
- Place unit back in enclosure
- Connect power cord
- Put back insulator that covers the terminal block. Make sure no terminals are exposed to the operator.
- Apply AC power to unit
- Insert the pin in the small pinhole (located in the upper right hand corner) to reset the unit.
- The unit will display the model # and the rev. #, followed by:



NOTE: Make sure programmed Memory Module is inserted. This will prepare the unit to read schedule settings from the inserted Memory Module. Press **EVENT**, display will show:



If daylight savings is required, press **ENTER**, display will show:



Press **ENTER** to accept default dates (second Sunday in March) or press **MONTH, DATE, and DAY** to modify DST settings and press **ENTER**. The display will show:



Press **ENTER**, display will show:



Press **ENTER** to accept default dates (first Sunday in November) or press **MONTH, DATE, and DAY** to modify DST settings and press **ENTER**. Press **MODE**, the display will show:



NOTE: DST OFF indicates Daylight Savings Time was not set.

4.0 SEASON DURATION SET


Up to 4 different season durations can be set by entering the START and END dates.

NOTE:

1. If season durations are not set, they will not appear on the schedule and astronomic mode.

2. Each season can be set up to 364 days.
3. Any season can cross the year boundary, i.e., season can start in the current year and end the next year.
4. When any two or more seasons overlap, the higher numbered season has priority.

Press **MODE** until display shows:

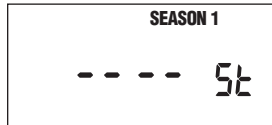

Press **MONTH** and **DATE** to set the starting period of season 1 and then press **ENTER**. The display will show:




Press **MONTH** and **DATE** to set the ending period of season 1 and then press **ENTER**. Follow the above procedure to set all other 3 seasons, if desired. To delete any entry press **DEL** and **ENTER**. To advance to next mode, press **MODE**.

NOTE: For any season to be used, the starting **MONTH**, **DATE** and ending **MONTH**, **DATE** must be preset.

5.0 SET INDIVIDUAL HOLIDAY DATES

Press **MODE** until display shows:

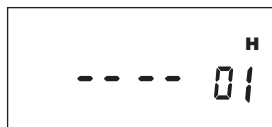

(Holiday) will be displayed steady. If today falls within a programmed season that season # will be displayed.

9.0 OVERRIDE

OVR1 and **OVR2** (override keys) are effective only in the **run** mode. If a channel is schedule for ON/OFF, then the channel will change the present load status until the next scheduled event. CH# will flash when the load is overridden from scheduled event.

EVENT (in the RUN mode) key is used to update the load status. It will execute the last scheduled event for CH1 and CH2. The display will only show the last scheduled event for CH1. To view the last schedule event for CH2, simply press the **EVENT** key again. If there is no schedule programmed for CH1 or CH2, the display will show —:—

9.1 NOTES:

1. Unit will go to RUN MODE automatically if no key is pressed for 5 minutes.
2. Unit has a look back feature. If you have just finished setting the unit and an output is to be updated, press the **EVENT** key. Unit will automatically pick up the last schedule.
3. Clear all memory. To clear all memory, while in the RUN mode, press **ENTER**, display will show:



Use the event key to display:



7.3 TIME ON AND ASTRONOMIC OFF

Press **MODE** until "sch01" appears. Press **ENTER** until a blank schedule appears then press **SELCT** to select channel 1 or 2. Press **HOUR, MIN** and **EVENT** to set desired ON time. Press **SELCT** to select desired days, holiday and/or seasons and then press **ENTER**.

ASTRO OFF:


Set astronomic OFF per sections 7.0 and 7.1

9.0 REVIEW, MODIFY AND DELETE

Press **MODE** to advance to any of the following MODES:

1. **CLOCK MODE:** Press **HOUR** and **MIN** to modify existing settings. Press **ENTER**.
2. **DATE MODE:** Press **MONTH, DATE** and **YEAR** to modify existing settings. Press **ENTER**. DAY is automatically adjusted.
3. **DST Daylight Saving Time:** To review press **ENTER**. To modify press **MONTH, DATE** and **DAY** to change existing setting. Press **ENTER**.
4. **SEASON MODE:** Press **ENTER** to advance to desired season. Press **MONTH** and **DATE** to modify, **DEL** to delete. Press **ENTER** to confirm.
5. **HOLIDAY MODE:** Press **ENTER** to advance to desired holiday. Press **MONTH** and **DATE** to modify, **DEL** to delete. Press **ENTER**.
6. **SCHEDULE MODE:** Press **ENTER** to advance to desired channel. Press **HOUR, MIN, EVENT** to modify time settings. Press **SELCT** and **DAY** to modify days, holiday and/or seasons, **DEL** to delete. Press **ENTER** after each modification.
7. **ASTRO MODE:** Press **SELCT** to select desired channel. Press **LAT** to change latitude. Press **ENTER**. Press **DAY** and **SELCT** to add or delete days in the sunset mode. Press **ENTER**. Press **HOUR** and/or **MIN** to change offset time for sunset. Press **EVENT** to change offset from + to -. Press **ENTER** and follow the same procedure above to modify or review sunrise settings.
8. **RUN MODE:** Time, day and seconds are displayed. If today is a programmed holiday, an H

Press **MONTH** and **DATE** to set holiday 1 and then press **ENTER**. The display will show:

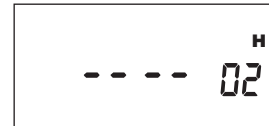


To delete any holiday press **DEL** and press **ENTER**.

NOTE:

- a. A total of 24 holidays can be set, all following the same schedule.
- b. For any holiday to be used, the **MONTH** and **DATE** must be preset.

6.0 SCHEDULE SET MODE

Press **MODE** until display shows:

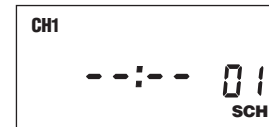

Press **SELCT** to select desired channel 1 or 2.


6.1 SETTING HOURS AND MINUTES

- a. Press **HOUR** and **MIN** to set desired time.
- b. Press **EVENT** to set desired event.

6.2 SETTING DAYS, HOLIDAY AND SEASONS

Press **SELCT** to select the flashing desired days, holiday and/or seasons, otherwise press **DAY** to skip and then press **ENTER**. To delete entry, press **DAY** until previously selected entry flashes, press **SELCT** and then press **ENTER**.

The display will show:

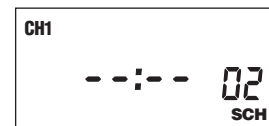

Follow the same procedures above to set more schedule entries for channel 1. At the next blank screen press **SELCT** to select desired channel and proceed with the steps above to set more schedule entries.

7.0 TO SET ASTRONOMIC SCHEDULE

Press the **MODE** key until display shows:



Press **SELCT** to select desired channel 1 or 2. Press **LAT** key to advance to the desired degree of latitude, from 0° to 60° north or 0° to 60° south. Press **ENTER**.

7.1 SELECTING ASTRO DAYS

Press **SELCT** to select desired days, holiday and/or seasons in which you want the indicated channel to turn ON at sunset and then press **ENTER**.

Display will show:



NOTE: Sunset Time will be based on Date and Latitude entered. Press **ENTER**. The display will show:



If an offset to sunset time is required, press **HOURL** and **MIN**. Offset can be set to 4 hours and 59 minutes max. Press **EVENT** to select + or - and then press **ENTER**.

NOTE: A + sign will turn load ON that many hours and/or minutes after sunset. A - sign will turn load ON that many hours and/or minutes before sunset. The display will show:



Press **SELCT** and then **ENTER** to activate sunrise time. **NOTE:** To turn load OFF at a preset OFF time, leave this field blank. Press **ENTER**.

The display will show:



If an offset to sunrise time is required, press **HOURL** and **MIN**. Offset can be set to 4 hours and 59 minutes max. Press **EVENT** to select + or - and then press **ENTER**.

NOTE: A + sign will turn load OFF that many hours and/or minutes after sunrise. A - sign will turn load OFF that many hours and/or minutes before sunrise.

7.2 ASTRONOMIC ON AND TIME OFF

Set astronomic ON per sections 7.0 and 7.1

TIME OFF:

Press **MODE** until "sch01" appears. Press **ENTER** until a blank schedule appears then press **SELCT** to select channel 1 or 2. Press **HOURL** and **MIN** to set desired OFF time. Press **SELCT** to select desired days, holiday and/or seasons and then press **ENTER**.